




PREPPER RADIO

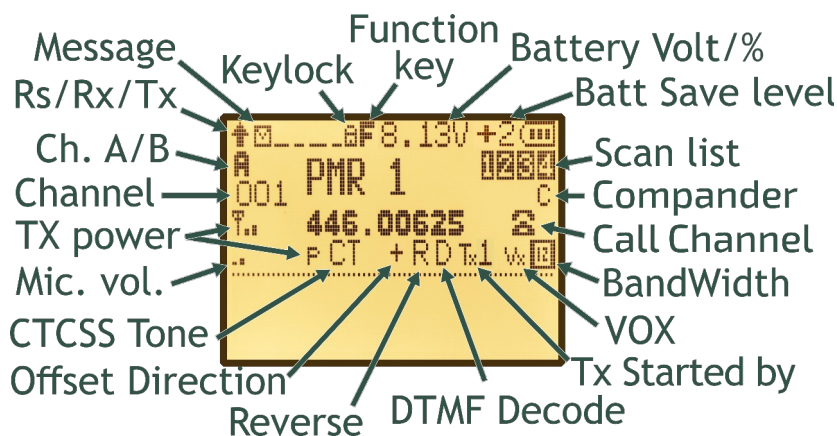

Scanny/Spectrum: **F** + *** Scan**

F + **VFO/MR** switch from Channels to Frequencies.

8 R change Resume type.

^ v increases or decreases RSSI.

5 Monitor.

0 FM Excludes a channel or frequency (X).

F + **^ v** changes the scanning direction.

F + **4 FC** Fast Copy function.

M = Scan pause.

^ v manually move between frq.

PTT copy frequency on the main screen.

*** Scan** switches between Spectrum ↔ Scanny.

Message: **F** + **M**

v : scroll through the 3 pages.

^ : Copy messages.


^ : Message selection.

***** : change the letter case.

L1 deletes a character.

M : Reply and send the msg.

M and ***** : edit Settings.

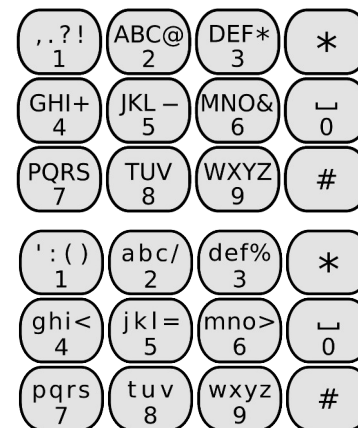

Contact = Selective Call : **F** + **9Call**

PTT To make a selective call to a single user.

9Call To make a selective group call.

My ID: max. 10 digits. from 0 → 9. (0 = unreachable, with 10 digits, the first not >3)

Function of short-press keys

M	Menu access. Modify and Memorise Settings. In Scan = Pause. Reply and send Message .
EXIT	Goes back through the menus. Stops scanning and FM radio.
* Scan	Activates the string for entering a DTMF sequence. Changes the character in write mode.
F#	Activates the secondary functions of the keys. EXIT to clear it.

Function of long-press keys

F#	Keypad lock. → A padlock appears at the top and the words 'Long F to unlock'.
L1	LED torch. 3 modes: ON, flashing and SOS.
L2	BANDWIDTH Adjusts the bandwidth. 25 25k 12.5 12.5k 6.25 6.25k

Function of keys associated with **F** (**F#** Activates secondary key functions.)

F + M	Activates Message . Copy ID from Contacs to Messagy. ID: 1 → 254. To 255: sends msg to all.
F + 1 Band	
F + 2 A/B	Switches between channel A and channel B.
F + 3 VFO/MR	Switches memory or VFO modes.
F + 4 FC	Call up the Call channel.
F + 5 NOAA	Clears selective call information.
F + 6 H/M/L	Power selection: x p L M H, these initials appear below the frequency.
F + 7 VOX	Activates or deactivates VOX. A Vx appears below the frequency.
F + 8 R	(Reverse) In Duplex, reverses freq Rx and freq Tx, an R appears below the frequency.
F + 9 Call	Opens the Contact section for selective calls.
F + * Scan	Opens the Scan and Spectrum function.
F + 0 FM	Radio FM broadcasting.